


CONTROL WITH THE USE OF A SYMAX (MAXITROL) REMOTE CONTROL

You are just one moment away
from the world of luxury... just turn
on your CALMA



For your own good, please take our recommendations seriously:

- Leave the installation and first start-up of the fireplace to a qualified installer.
- Familiarize yourself with the safety rules and the method of controlling the gas fireplace contained in the attached full User Manual.
- Keep all documentation that came with your fireplace.
- Instruct other potential users of the device in the field of operation and safety rules.


OPERATING MANUAL - PILOT MAXITROL

mycalma.eu


 CALMA

Become an aware user:


- 1 If you notice that the fireplace is not working or you can smell gas in the room, turn it off immediately, cut off the fuel supply to the device, close the gas valve, disconnect the electric circuit, ventilate the room and contact the service center.
- 2 If the pilot flame extinguishes during operation, wait at least 10 minutes before re-starting.
- 3 Supervise children and other people who require special attention when using the heater.
- 4 Do not touch a burning fireplace as it heats up to high temperatures.
- 5 Do not run the fireplace without installed windows. If they are damaged in any way, they must be replaced immediately.
- 6 Only decorative elements supplied by the manufacturer may be installed in the device in accordance with the full Instructions for Use.
- 7 Ceramic logs used in the device are elements of a gas burner. Modifications to their arrangement are not allowed.
- 8 There must not be curtains, wooden furniture, MDF board furniture, upholstered furniture, plastic items, laundry dryers and other flammable materials directly above the device and at a distance of at least 2 m from the glass.
- 9 If the heater will not be used for an extended period of time, shut off the gas supply.
- 10 Remember to commission periodic inspections of both the installed equipment and the associated air / flue gas system.

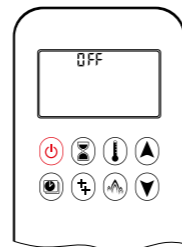


LIGHTING UP THE DEVICE

Press and hold  until you hear two short beeps, then release the button. The heater will start the firing-up procedure. After firing up, the device will automatically set the maximum flame height.


MINIMUM FLAME HEIGHT

With the fireplace working, **double-press** . The display will show the symbol "LO" in place of the temperature.




 


MAXIMUM FLAME HEIGHT

With the fireplace working, **double-press** . "HI" will appear in place of the temperature on the display.


STANDBY MODE


With the heater on, **press and hold** . The main burner will be extinguished.

+ CHILD PROOF MODE ACTIVATION

Press  **and**  **simultaneously**. The  icon will appear on the display. **DEACTIVATION**. While CHILD PROOF is on, **simultaneously press**  **and** . The icon  will disappear.

DEVICE BURNING OFF

With the heater or heater in STANDBY mode, **press and hold** . A flashing message "OFF" will appear in the display in the hours and minutes field. The blanking procedure will end when the symbol stops flashing. If the device is warmed up, wait at least 5 minutes before trying to fire again.

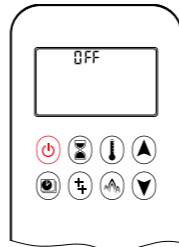

BATTERY REPLACEMENT IN THE REMOTE CONTROL: 2 x 1.5V AAA batteries. There is an icon on the remote that shows the battery level. Its blinking means that the battery needs to be replaced.

CHANGING THE BATTERIES IN THE CONTROL MODULE: 4 x 1.5V AA batteries

The device also signals the need to replace the battery in the control module (receiver) by means of short cyclical signals when firing up.

Used batteries in the receiver and the remote control should be placed in special containers for this type of waste.

CODE	LC	LD
F09	Heater is not controlled.	Remote control and control module are not paired correctly. Perform lighting up procedure again.
F46	The device is not responding.	No or poor communication between the remote control and the control module. Weak or discharged batteries in the control module. Replace the batteries in the control module.

CONTROL VIA myfire APP

Your fireplace can also be operated from the dedicated myfire App. You can download the application from the website: myfireapp.com



The full and up-to-date content of the User Manual and Installation Manual can be found at www.mycalma.eu

The CALMA line of prestigious gas fireplaces was created and produced by the brand **HITZE**